Universal Mounting Instructions


AARTONMOUNTS 3954

Diagram 1

This product is designed to mount VESA 75mm, 100mm and 200x100mm compatible LCD televisions up to 50 pounds onto a vertical wall. It allows you to tilt your new television up 18° and down 25. Check carefully to make sure there are no missing or defective parts. Never use defective parts. Improper installation may cause damage or serious injury. If you not understand these directions, or have any doubts about the safety of the installation, please call a qualified contractor.


R equired Tools: Drill with 3/16 inch bit, Phillips screw driver


Parts and Hardware: * Not shown as actual size

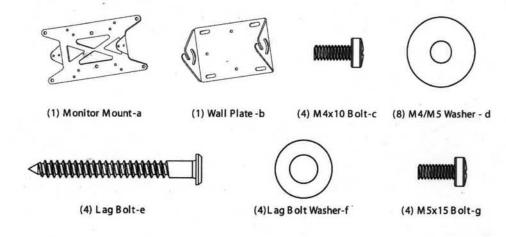

Step1-Attaching to the Television: Attach the Monitor Mount (a) to the back of your LCD television using the M4 x 10 Bolt(c) and M4 Washer(d) as shown in Diagram1.Place 4 bolts through the Monitor Mount and tighten snugly into the VESA bolt mounting pattern on the back of the television. Make sure the small side of Monitor Mount faces toward the bottom of the television.

Step2-Attaching to the Wall: Hardware for wood stud mounting is provided. For all other mounting applications contact a local contractor or hardware store. Use a high quality stud sensor to locate a stud. It is a good idea to verify the stud location with an awl or thin nail as shown in Diagram2a. Use the Wall Plate(b) as a template to mark the four holes locations on the wall. Make sure these holes are aligned vertically and centred over the stud. Pre-drill the four holes to a depth of 2.5 inch using a 3/16 inch drill bit. A ttach the Wall Plate to the wall using the four Lag Bolts(e) and Lag Bolt Washer(f) as shown in Diagram 2b.

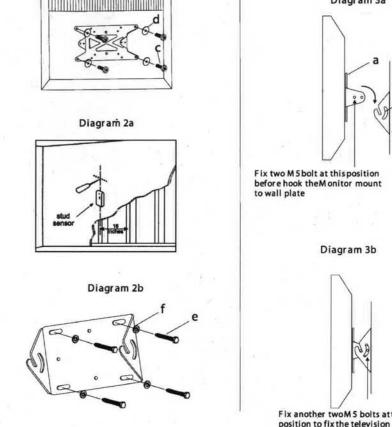

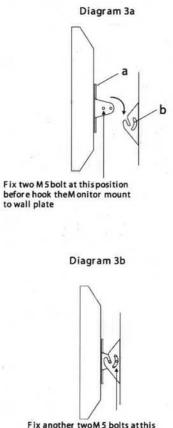

Step3-Add Monitor Mount to Wall Plate: Once the LCD TV is attached to the Monitor Mount (a), and the Wall Plate(b) is properly installed. Fix two M5 Bolts at each side of Monitor Mount, pull the TV and insert Monitor Mount to Wall Plate. This process is shown in Diagram 3a. Make sure the Monitor Mount is inserted completely onto the Wall Plate. Finally fix the metal pieces by two M5 Bolt(g) and M5 Washer(d), shown in Diagram 3b. Loose the two M5 Bolts if you want to tilt the television.