



## AARTONMOUNTS LCD BRACKET NUMBER 3023F

### 1. Part List

No.	Name of part	Material	Amount
A	Wall plate	Q215	1
B	TV Fixed plate	Q215	1
C	φ 4 Flat washer	Standard part	4
D	φ 5 Flat washer	Standard part	4
E	φ 6 Flat washer	Standard part	4
F	ST5.5*55Lag bolt	Standard part	6
G	φ 8*40 Concrete anchor	PA	6
H	M4*8 Phillips screw	Standard part	4
I	M4*12 Phillips screw	Standard part	4
J	M5*8 Phillips screw	Standard part	4
K	M5*10 Phillips screw	Standard part	2
L	M5*12 Phillips screw	Standard part	4
M	M6*8 Phillips screw	Standard part	4
N	M6*12 Phillips screw	Standard part	4

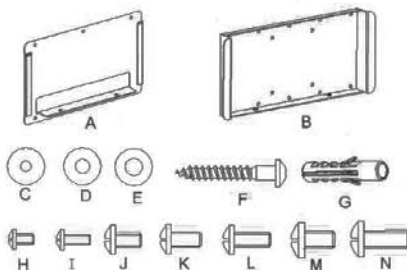

### 2. Name of parts

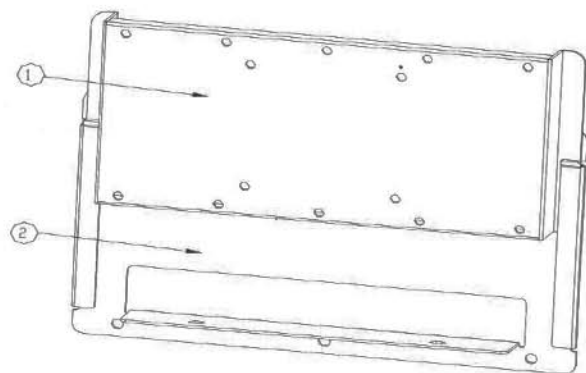


Item No.	Symbol	Name	Material	Quantity	Remark
1	3023 F-01	TV Fixed plate	Q215	1	δ=1.5
2	3023 F-02	Wall plate	Q215	1	δ=1.5


### 3. Installation and operation instructions

**Note: please read the instructions carefully before installation!**


Step1: Use the wall plate as a templet to drill six holes of 8 diameter and 50 depth in the concrete wall or the hard wood wall. Then Wedge six plastic concrete anchors into the holes.

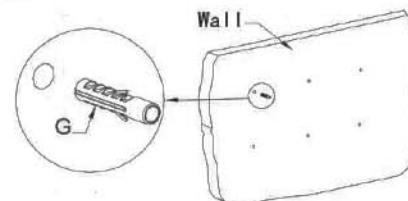


Step2: Screw six lag bolts into the plastic concrete anchors through the wall dead plate to make the dead plate and vertical wall into a whole.

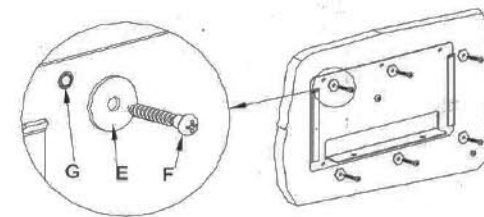


Step3: Install TV fixed plate on the TV back. Select four suitable bolts from the parts bag and screw them into the bolt-holes in the back of the TV.

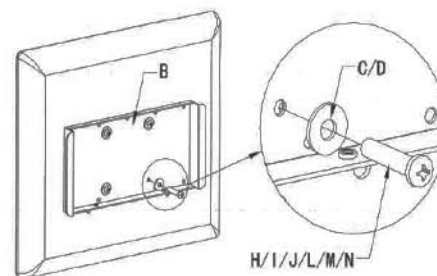

Step4: Hang the TV fixed plate in connection with the TV panel on the wall dead plate.

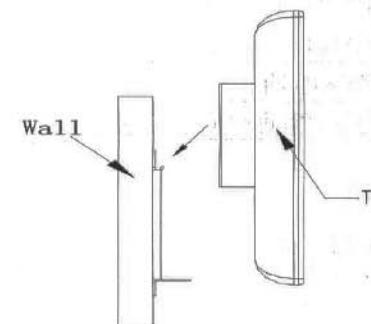

Step5: Screw down two bolts under the wall fixed installation for the panel TV.

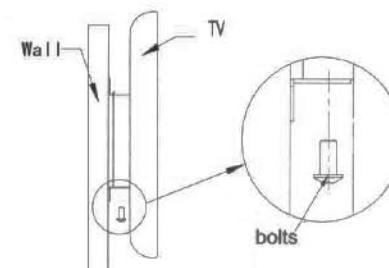

### 4. Notes

- (1) The wall plate should be fixed on a solid concrete wall
- (2) Must Be Fitted By A Professional