




Screw w/square      Long screw

(1) Set aside these items for each arm.



(2) To assemble the right arm, start with the two pieces shown. Put the inner arm in the outer arm.

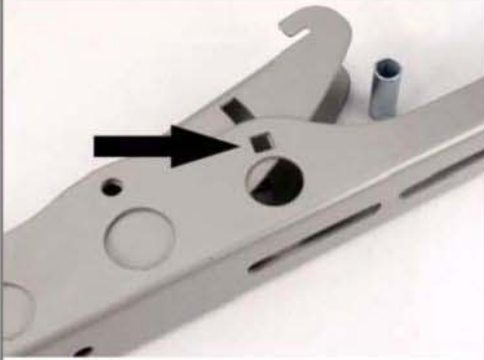

(3) Place the metal cylinder inside the arm, in the area indicated by the arrow.




(4) Place the screw (with the 4-sided square shape) into the cylinder.



(5) Turn the arm over. Put a rubber washer inside and a metal washer outside the hole, let the screw pass through them.



(6) Fasten the turn handle. The under knob is for ornament, without adjust function. Repeat all of the above again for the bottom hole

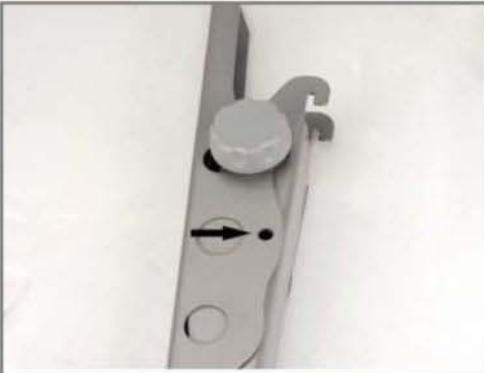


(7) This is the location where the long screw will be placed (along with a washer.)



(8) Fasten the long screw with the washer (as shown).



(9) Turn the arm over. Put a metal washer on screw and fasten the nut onto the screw.

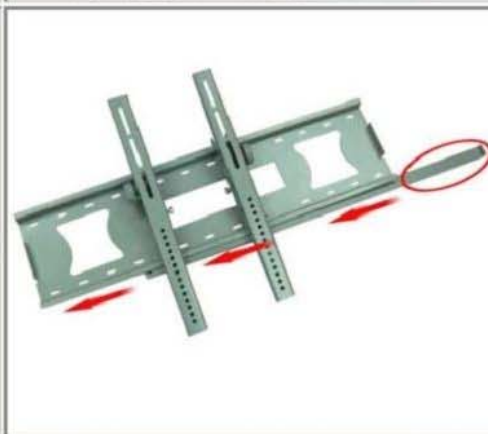

(10) Mount the wall bracket securely. Then, place the monitor/arms onto the wall bracket. Finally, slide the long bar under the arms (as pictured) until secure. Padlock can be attached for additional security.